

- Turn analog switch to ClickShare:

Reference “Main Board Room – How to use the Analog Controller” to switch to ClickShare input

- You should see “Main Board Room – ClickShare” on the screen when on the right setting:




- Plug in the Barco dongle into your computer and install software:

- Once plugged in, there should be a white light that shows up




- Then you will need to run the ClickShare software:
 - Open Windows Explorer > ClickShare > ClickShare_for_Windows.exe

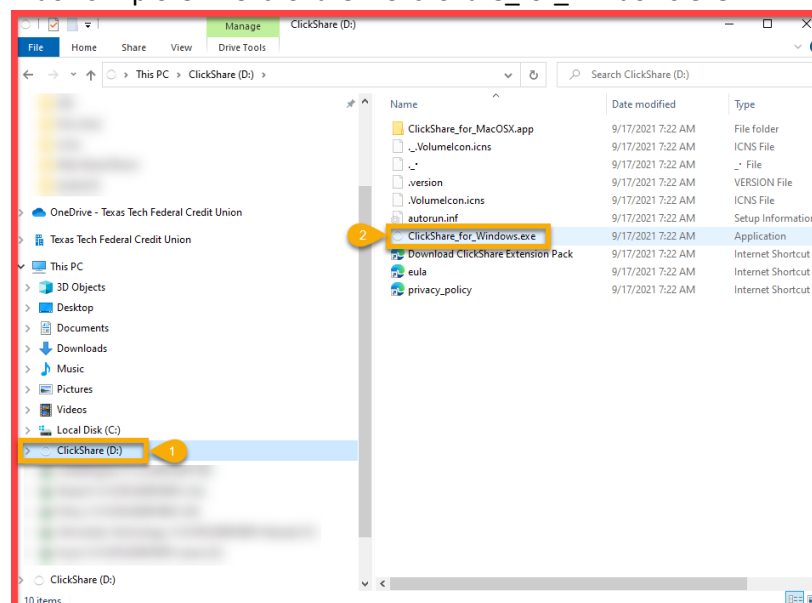

Main Board Room – How to use ClickShare



- Once run, you will see a “Preparing” notification on the bottom right of the screen

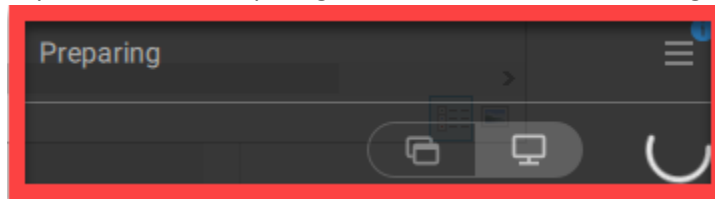

- **Barco Dongle should turn red when ready to use:**

- Once red, Click the big silver button in the center to project to the screen:



- Computer screen should now be on the screen:

